

Piezo Position

Bushman/Bravo

Needle tip align with third hole. 1.5-3mm gap from side of burner.

Important that the spark is on hole/hole edge and not between two holes.



Outback/Alpha

Needle tip align with third hole. 1.5-3mm from top of burner.

